

IMPORTANT!

NZ SETUP INSTRUCTIONS

FIRMWARE UPDATES

On occasion new Blu-ray discs are released that will not run on your machine, for this reason the firmware on your Oppo needs to be updated regularly. Connecting the player direct to the internet and enabling “Firmware Notification” under Device Setup in the Setup menu is the easiest way. The updates can also be done via a USB thumb drive or CD. For full instructions, check the manual or go to the SUPPORT page for your model at www.oppodigital.com.

VIDEO OUTPUT SETUP

To optimize your video settings for NZ; press the SETUP button on the remote control and go to:

VIDEO SETUP > TV SYSTEM > **CHANGE TO MULTI SYSTEM (don't set to Pal)**
 VIDEO SETUP > OUTPUT RESOLUTION > **MATCH YOUR DISPLAY**
(1080p Display = Set to 1080p, don't set to Auto)
(720p/1080i Display = Set to 720p, don't set to Auto)

DVD REGION

Your player will be **DVD Region Free** (Region 0) out of the box.

BLU-RAY ZONE

Your player will be **Blu-Ray Zone B** out of the box.

Change of Blu-ray Regions:

- (1) Start the player and do not put in any disc. The screen will show “No Disc”.
- (2) Press the following buttons in sequence on the remote: DIMMER, DIMMER, DIMMER, MUTE, then press the correct number for the zone you want to change to, then POWER OFF

Blu-Ray Region Selection Operation – Complete in 20secs	
Region A	DIMMER , DIMMER , DIMMER , MUTE , 1, OFF
Region B	DIMMER , DIMMER , DIMMER , MUTE , 2, OFF
Region C	DIMMER , DIMMER , DIMMER , MUTE , 3, OFF



- (3) Restart the player. The Blu-ray region setting will be effective after reboot.